


Nº	CODE	DESCRIPTION
1	BCL2501	CASE COVER ASSY
2	BCL2502	DRIVING GEAR ASSY
3	BCL2503	CONICAL RIMA ASSY
4	BCL2504	BLADE ASSY
5	BCL2505	COUNTER BLADE
6	BCL2506	HALL PCB ASSY
7	BCL2507	ENGINE ASSY
8	BCL2508	GEAR BOX ASSY
9	BCL2509	TRIGGER ASSY
10	BCL2510	SMALL BEVEL ASSY
11	BCL2511	BIG SPIRAL BEVEL ASSY
12	BCL2512	MAIN BODY
13	BCL2513	CENTER BOLT ASSY
14	BCL1C5IB	CHARGER
15	BCL1B06IB	BATTERY ASSY
16	BCL2516	MAIN PCB
17	BCL2517	POWER BUTTON ASSY
18	23122003	LCD DISPLAY ASSY

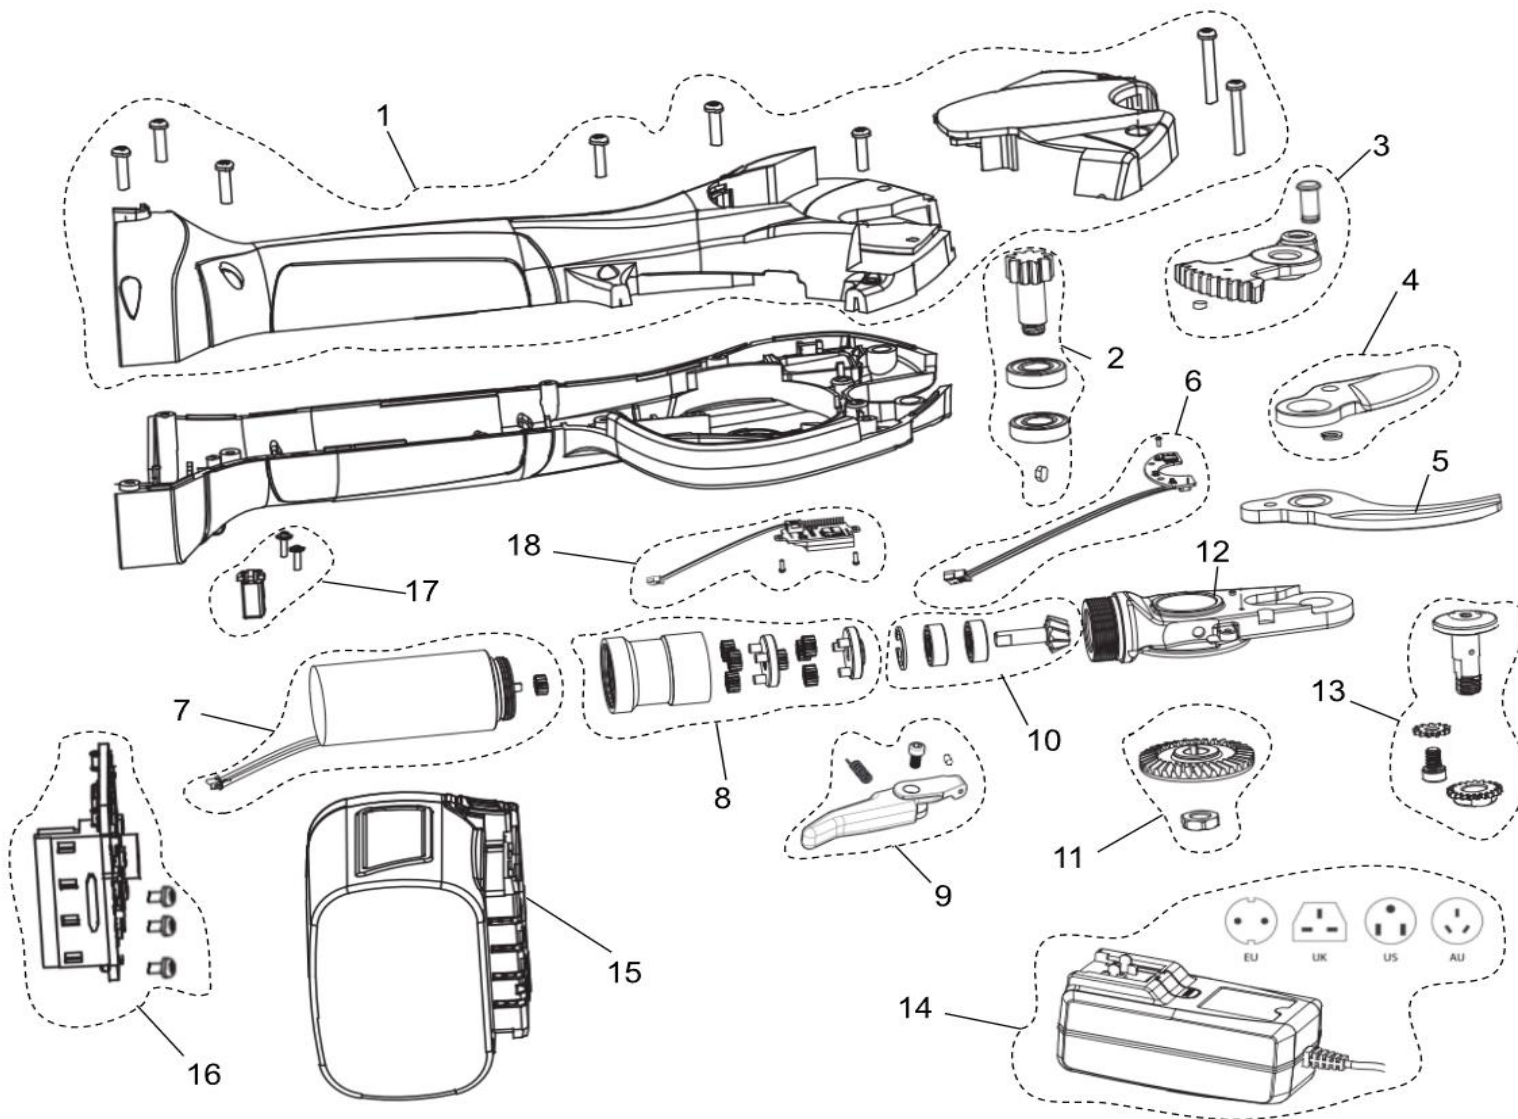

**BAHCO**

**BCL25IB**

Revision: 03

*SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe*

12012022